



**Cardinal 825 Addendum**

**Checkweigher v1.x.x.x**

## Introduction

The Cardinal 825 features a Checkweigher with on-screen confirmation of weight ranges and an animated slider to indicate which range the weight lies within.

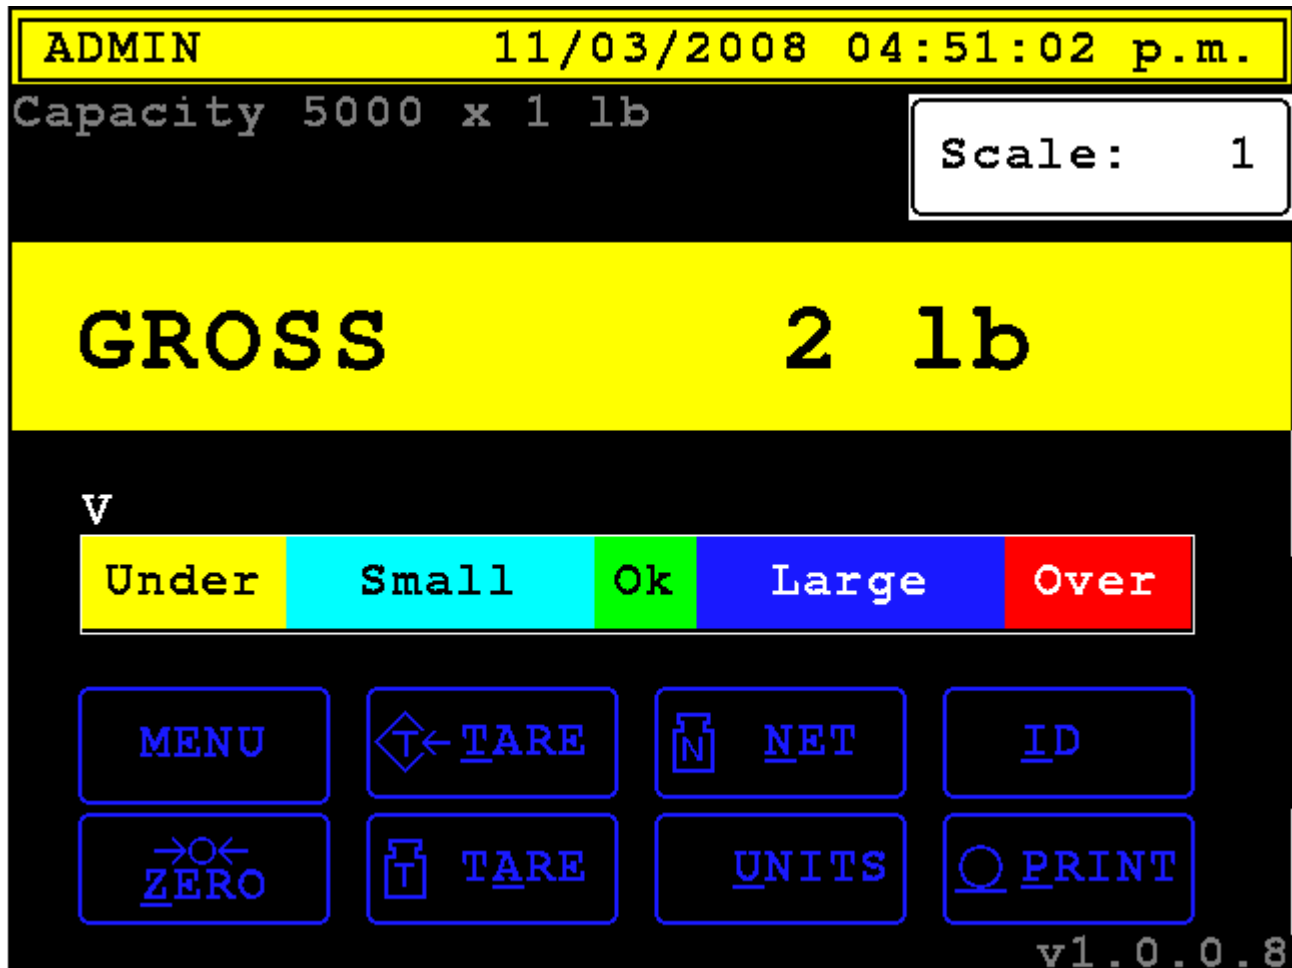


Figure 1: Cardinal 825 Checkweigher

- Configurable ranges from one to five zone.
- Configurable foreground and background colors for each zone.
- Configurable text displays for each zone.

## Setup

1. Configuring zones
  1. Touch the **MENU** button or press “M” to access the Checkweigher menu.
  2. Touch the **3. Presets** button or press “3” to access the presets menu.

3. The **Add/Edit Presets** menu shows all zone configurations and gives a graphical representation of what the current zone configuration will look like (figure 2).



*Figure 2: Graphical representation of Checkweigher zone configurations.*

4. Touch a configuration item or select one using the **UP/DOWN** navigation keys and pressing **ENTER**.
5. Use the navigation keys to select any item you wish to edit:
  1. Enabled – If set to yes, the zone configuration is active.
  2. Label – Defines the text label to be placed on the zone.
  3. Background – Defines the background color for the label.
  4. Foreground – Defines the foreground color for the label.
  5. Weight – Defines the **upper limit** for the zone.
6. Press the **ENTER** key to save the configuration or the **ESC** key to cancel changes.
7. Press the **BACK ARROW** or **ESC** key to exit the **Add/Edit Presets** menu.
8. Touch the **5. Exit** button or press the **ESC** key to exit the menu.